I N F O

INSTALLATION AND INSTRUCTION MANUAL

Chest Freezer EC6800N

Electrolux

SAFETY INSTRUCTIONS

WARNINGS

These warnings are provided to improve safety, and should be read carefully before installing or using your freezer.

IMPORTANT

It is important that these instructions are kept with the freezer for future use. If the freezer is sold or given to another user, or if you move and leave the freezer behind, you must ensure that the instructions accompany the freezer to enable the next user to use the freezer correctly and read the relevant warnings.

Installation

- This freezer is heavy. Take care when moving it.
- The appliance should be left for 2 hours after installation before it is turned on, in order to allow the refrigerant to settle.
- It is dangerous to alter the freezer specifications, or to modify the freezer in any other way.
- Changes in the electrical mains system in connection with the installation of this freezer should always be carried out by an authorised electrician or competent person.
- Make sure that the freezer is not placed on top of the mains cable.
- This freezer is only intended for the freezing and storage of food.
- Do not under any circumstances attempt to repair the freezer yourself. Repairs carried out by untrained people may result in personal injury or serious malfunction of the freezer.
- Service of the freezer should be carried out by an authorised service company, and only original spare parts should be used. See under "Guarantee Conditions and Service".

General use

- The inside of the freezer contains pipes through which coolant flows. If these pipes are punctured the freezer may be damaged beyond repair, and food may be lost. Do not use sharp instruments to remove frost or ice. Frost can be removed using the enclosed scraper. Do not knock ice off the sides of the freezer, but remove it by defrosting the freezer. See under "Maintenance".
- This freezer includes components that are heated during operation. Consequently, adequate ventilation must always be provided. If ventilation is insufficient, defects may occur, resulting in the loss of food. See under "Installation".
- Do not place drinks in the freezer. Bottles and cans containing carbonic acid or sparkling drinks are particularly prone to explosion, which may damage the freezer.
- Do not remove items from the freezer if your hands are damp/wet, as this could cause skin abrasions or frost/freezer burns.
- Ice lollies can cause frost/freezer burns if eaten direct from the freezer.
- Manufacturers' food storage recommendations should be strictly adhered to. Refer to relevant instructions.
- Do not re-freeze food once it has been defrosted.
- Observe the recommendations for storage carefully. See under "Helpful Hints".

Child safety

- This freezer should only be operated by adults. Children must not be allowed to tamper with the control buttons or play with the freezer.
- If the freezer is fitted with a lock to prevent tampering by children, the key must always be kept safely out of the reach of children, and far away from the freezer.
- Before disposing of an old freezer, make sure that the lock (if present) no longer works, or remove the lid completely. This is to prevent accidents, and avoid the danger of children getting locked inside.

In the interests of the environment

When disposing of your old fridge, freezer or fridge/freezer:

Check with your local Council or Environmental Health Officer to see if there are facilities in your area for collecting the gas from the appliance for recycling. This will help reduce the amount of CFC gas released into the atmosphere.

Help to keep your country tidy - use authorised disposal sites for you old appliances.

CONTENTS

INSTALLATION	Page 5	**HELPFUL HINTS**	Page 8
Positioning	Page 5	Storage	Page 8
Electrical Connections	Page 5	Freezing	Page 8
Switching On	Page 5	Defrosting	Page 8
HOW TO USE	Page 6	**MAINTENANCE**	Page 9
Temperature Control	Page 6	Defrosting	Page 9
Opening/Closing The Lid	Page 6	How To Clean Your Freezer	Page 9
Control Panel	Page 6	When Not In Use	Page 9
Freezing	Page 6	**IF SOMETHING DOES NOT WORK**	Page 10
Packaging And Positioning	Page 7	If There Is a Power Failure	Page 10
Capacity	Page 7	How To Change The Bulb	Page 10
Baskets	Page 7	**GUARANTEE CONDITIONS SERVICE & SPARE PARTS**	Page 11
Accessories	Page 7	**ELECTROLUX SERVICE FORCE CENTRES**	Page 12-13

Measurements with lid closed

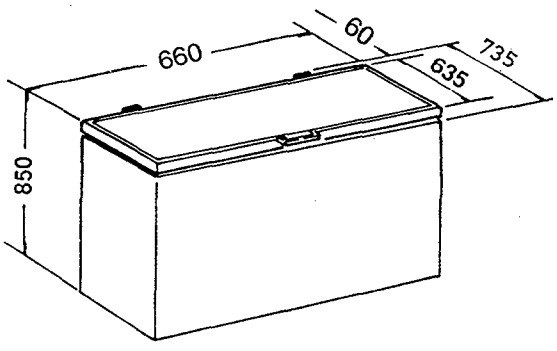

Measurements with lid open

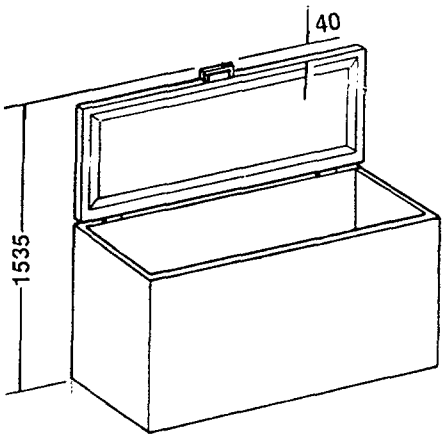

CE This appliance complies with the following CEE Directives:

- 73/23 CEE of 19/02/73 (low voltage directive) and subsequent modifications.
- 89/336 CEE of 03/05/89 (electromagnetic compatibility directive) and subsequent modifications.

MODEL	EC6800N
VOLUME(GROSS)	180 Litres
VOLUME (NET)	173 Litres
HEIGHT	850 mm.
WIDTH	660 mm.
DEPTH	735 mm.
ENERGY CONSUMPTION/24HRS	1,04 KWh
ENERGY CONSUMPTION/YEAR	380 KWh
FREEZING CAPACITY	14KG/24hrs
HOLD-OVER TIME	31Hours
RATED POWER	110W

Texting has been carried out in accordance with ISO 5155 regarding the determination of freezer capacity, energy consumption and hold-over time.

Information for test institute: A plan of the positioning of test packages may be obtained directly from the manufacturer.

INSTALLATION

POSITIONING

- Place de freezer horizontally on a firm surface, ensuring all four rollers come into contact with the floor or are supported to ensure the freezer is level. Use a wood block or similar object to compensate for any bumps/holes in the surface.
- The room should be dry and adequately ventilated.
- If the room temperature exceeds 32°C, or falls below freezing point, the freezer will not function as it should.
- Do not place the freezer close to sources of heat, radiators, chimneys, etc., and do not place the freezer in direct sunlight.
- If the freezer has been handled standing on end, it should be allowed to stand in its normal position for about 12 hours before switching on.
- Remove plastic security tapes for transportation placed between the cabinet and the door.

ELECTRICAL CONNECTIONS

Before you use your freezer, check that the voltage shown on the data plate inside the cabinet conforms with your mains supply.

The mains lead of the freezer is fitted with a non-rewireable moulded-on 13 amp plug containing 13 amp fuse. In the event of the fuse requiring replacement, the fuse cover/carrier should be removed, using a small screw driver to lever it out. The old fuse should be replaced by a 13 amp ASTA approved BS1362 fuse and the fuse cover/carrier *must* be refitted before the plug is used again.

If the fuse cover/carrier is lost, a replacement can be obtained from the Electrolux Service Shops and offices listed on page 12-13. The fuse cover/carrier must be of the same colour as that of the coloured insert in the base of the plug. **In no circumstances must the plug be used without a correct fuse cover/carrier fitted.**

If the plug supplied on the freezer mains lead is not suitable for the socket outlet in your home it should be cut off and disposed of safely, or destroyed, to avoid any possible shock hazard resulting from the plug being inserted into a 13 amp socket elsewhere in the house. A suitable replacement plug should be fitted as given below.

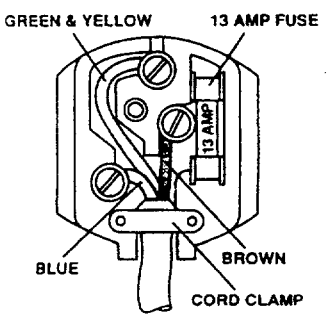

WARNING—
THIS APPLIANCE MUST BE EARTHED.

The manufacturer declines any responsibility should this safety measure not be observed.

IMPORTANT

The wires in the mains lead of this appliance are coloured in accordance with the following code:

GREEN- and - YELLOW	**:**	**EARTH**
BLUE	**:**	**NEUTRAL**
BROWN	**:**	**LIVE**

As the colours of the wires in the mains lead may not correspond with the coloured markings identifying the terminals in your plug proceed as follows:

Connect the GREEN-and-YELLOW coloured wire to the plug terminal marked letter E or earth symbol ⏚ or coloured green-and-yellow.

Connect the BROWN coloured wire to the plug terminal market letter L or coloured red.

Connect the BLUE coloured wire to the plug terminal marked letter N or coloured black.

If the supply cord of this appliance is damaged, it must be replaced by special cord (spare part ref. 567364415) that you can get in any of the Electrolux Service Centers that are showed in the last page.

Please ensure that when the appliance is installed, it is easily accessible for the engineer in the event of a breakdown.

SWITCHING ON

Before switching on, the freezer should be cleaned inside. See under «Maintenance».
Set the thermostat button in the middle position. Allow the freezer to run for several hours before placing food inside.

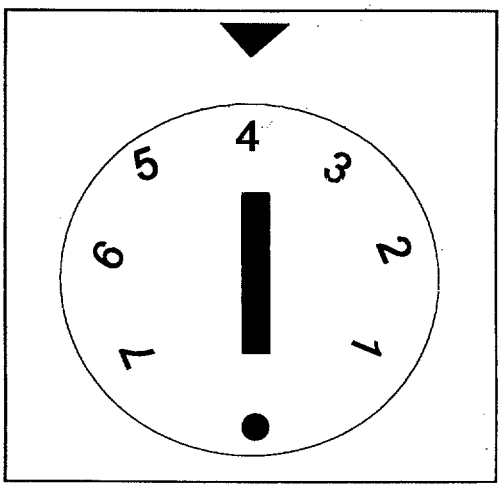

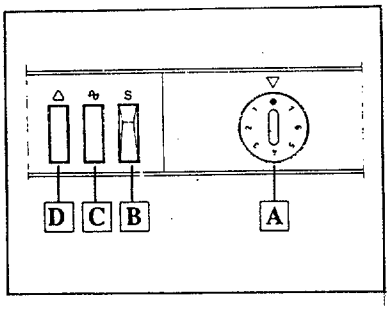

Control Panel

A - Thermostat knob for Temperature Regulation
Allowing for an adjustment of interior temperature depending on external conditions and usage.
Pos. 1 - Minimum thermometer temperature.
Pos. 7 - Maximum thermometer temperature.
Pos. "•" - Power off.

B - Super Button
Freezing fresh food - Switch yellow button on.

C - Green Light
Operation pilot light.

D - Warning Light
The illuminated red warning light means that the inner temperature of the freezer is too warm to maintain the frozen food.

The green light is illuminated as long as there is a supply of electricity to the freezer.
The yellow light is illuminated when the "Super" button is depressed. See under "Freezing".
The red light illuminates when the temperature in the freezer has reached a level where safe storage of food is no longer ensured.

The red alarm light can illuminate due to:

- Insertion of a large amount of fresh food. The red alarm light will go out after a while.
- Opening the lid for too long. The red alarm light will go out after a while.
- A defect in the system. See under "If something does not work".

Opening/Closing The Lid

The lid is fitted with a tightly closing sealing strip to prevent moisture getting inside the freezer and increasing the amount of frost formed.
When the lid is opened, the air inside the freezer becomes slightly warmer and expands. As soon as the lid is closed again, the air is cooled immediately.
This may lead to the creation of a vacuum which makes it hard to open the lid immediately after it has been closed. This is quite normal.
Wait a few minutes until the vacuum has disappeared, then open the lid by pulling gently. Never pull the handle violently.

Freezing

It is important that fresh food placed in the freezer is frozen quickly, and that the food already in the freezer is heated as little as possible in this way.
If more than 3-4kg of food is to be frozen:

- Press the "Super" button (yellow light comes on). The freezer will now run continuously, creating a sufficient reserve of the temperature required.
- Press the "Super" button 6-24 hours before placing fresh food in the freezer, depending on how much food is to be frozen.
- Place the food in the freezer and leave the "Super" button on for about another 24 hours.
- Then press the "Super" button again (yellow light goes off). The freezer will return to normal storage temperature. If you forget to press the "Super" button again, the freezer will not be damaged by running at the "Super" setting for some time, but energy will be wasted.

Packaging and Positioning

- Food must be cold before freezing (no higher than room temperature).
- Food must be packed in airtight and moisture-proof packaging to prevent it from drying out.
- Place fresh food for freezing close to the cold sides of the freezer, making sure that it is not in contact with the frozen food already in the freezer.
- Never fill the freezer to more than 5mm below the top edge.

See under "Helpful Hints".

Capacity

The freezing capacity of the freezer is stated in the data plate (kg/24hrs). Do not exceed the amount stated - if you do, the freezing time will be extended. The data plate is located inside the lid.

IMPORTANT

The freezing capacity stated can be utilised to the full occasionally in order to freeze large amounts of fresh food. However, if the freezer is filled with large amounts of food for freezing every day, the capacity stated is reduced by about one-third.

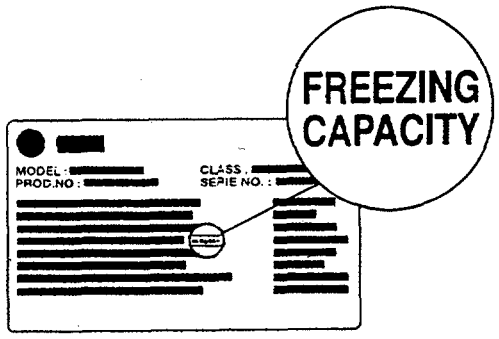

Baskets

The baskets are designed for the storage of food which has already been frozen. The handles can be placed in two positions, as illustrated.
The baskets can then be placed either inside the freezer, or hung on the edge of the casing.

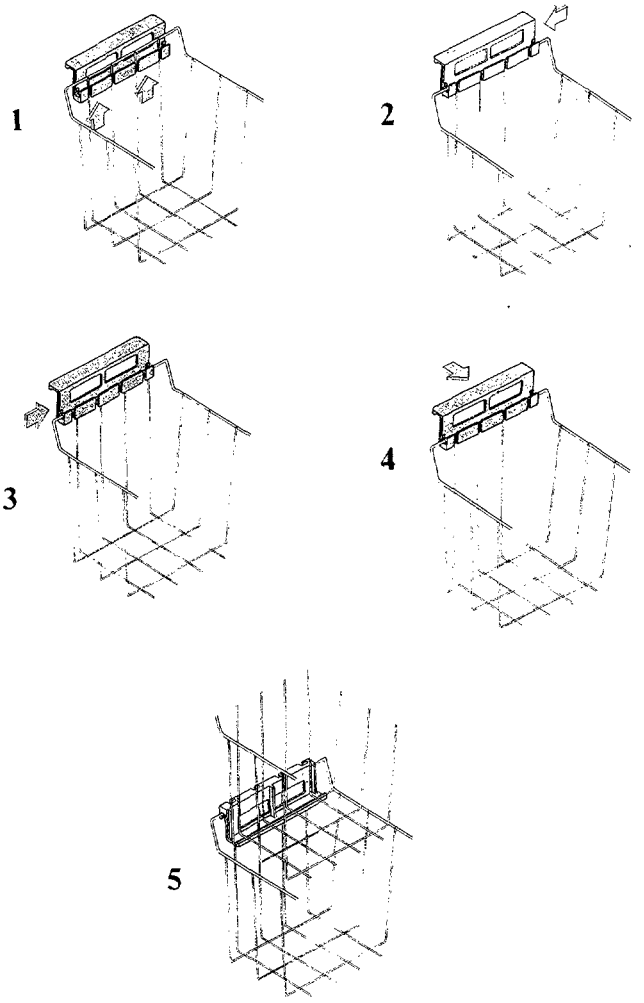

Accessories

Baskets can be purchased as accessories from some local dealers or from Electrolux Service Centres.

HELPFUL HINTS

Storage

Frozen food can be stored anywhere inside the freezer, but should be kept at least 5mm below the top edge.
Never exceed the maximum storage time for purchased food.
When you buy frozen food, make sure that it has been stored at the correct temperature. Do not buy products which have wet or damaged packaging.
Place purchased products in your freezer as quickly as possible. We recommend using an insulated bag to bring such products home with you.
Never place bottles, warm objects (higher than room temperature) or fizzy drinks in the freezer.

Freezing

Only use fresh food of the best quality. Cool down hot dishes to room temperature as quickly as possible before placing them in the freezer.
If freezing is too slow, the quality of the food being frozen deteriorates. Consequently, do not freeze larger amounts than stated in the freezer's data plate.
Wrap food carefully in freezer foil, or use the special freezer boxes or bags which are on the market. Divide food into small portions before freezing - this ensures that freezing is more rapid, and means that you only need to defrost the amount needed for immediate consumption.
Remember that defrosted food must not be re-frozen. However, cooked dishes which have been made using defrosted food may be frozen.
Mark the freezer packaging with the date of freezing.
We recommend keeping a record of the contents of your freezer.
If you wish to freeze food several days in a row, the maximum freezing capacity stated per day is reduced by about one-third.
As far as possible, keep the lid closed during freezing.

Defrosting

In general food should not be defrosted at room temperature, since this increases the risk of bacteria growth. It is best to defrost large portions of meat or poultry in the refrigerator. This also applies to food which is to be consumed as it is e.g. fruit, butter and sliced meat.
Small portions of food can be cooked straight from the freezer. A good number of ready-to-cook dishes can also be cooked without defrosting. always observe the instructions on product packaging.
Bread tastes good when defrosted in a moderate oven.
Microwaves can be used for the rapid defrosting of most frozen foods. Observe the instructions for use of the microwave oven concerned.

MAINTENANCE

Defrosting

The formation of frost on the inside of freezers cannot be avoided. Frost is formed when moisture contained in the air comes into contact with the cold surfaces of the freezer.
Consequently, the lid should only be opened when necessary, and it should never be left open for long periods.
A thin layer of ice or frost does not affect the function of the freezer adversely, and can be removed carefully using the scraper provided.

IMPORTANT
Never use a knife or any other sharp implement to remove frost.

When the frost or ice layer is 10-15mm thick, the freezer should be defrosted. We suggest that you defrost your freezer when there is little or no food inside.
Switch off the current. Remove the contents of the freezer, wrap them in newspapers, and leave them in a cold place. The speed of defrosting can be increased by placing one or more bowls or hot (not boiling) water inside the freezer and closing the lid. Do not try to speed up defrosting by using anything other than hot water, since this may damage the freezer. Open the lid after a while, and remove the layer of ice carefully.

The defrost water can be collected in a bowl by pulling the plug from the defrost channel about 1/2" (see diagram) until the square hole at the bottom is just clear of the cabinet. Leave the plug resting in as near a horizontal position (leaving it at an angle will result in defrost water dripping down the side of the cabinet) in order to allow the defrost water to drain through the square hole at the bottom of the plug.

After defrosting, clean the inside of the freezer and replace the plug (with the square hole at the bottom) into the defrost channel.

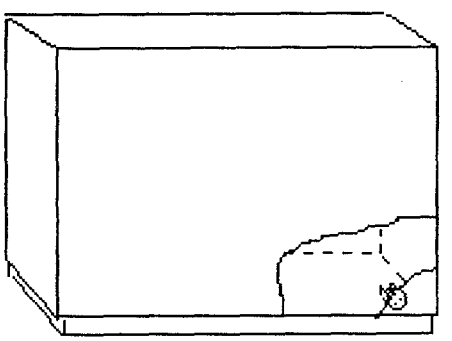

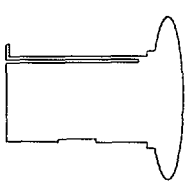

IMPORTANT
Remember to replace the plug in the defrost channel.

How To Clean Your Freezer

The best time to clean your freezer is after defrosting and before the electricity supply is connected again.

With dry hands, remove the plug from the mains socket, and remove all loose accessories before cleaning the freezer.
Use a damp cloth to clean your freezer. Use hot water, and a mild, non-aromatic cleaning agent (e.g. a weak solution of bicarbonate of soda diluted in a bucket of warm water).
After cleaning the freezer, clean the basket(s) before replacing them.

IMPORTANT
Never use strong cleaning agents, scouring agents or strongly aromatic cleaning agents to clean the inside of your freezer, as this will damage the inside and leave a strong smell.

External Cleaning

Wash the outer cabinet with warm soapy water.
Do NOT use abrasive products.

When Not In Use

- Disconnect the appliance from the electricity supply.
- Remove all food from the freezer.
- Clean the freezer as described above.
- Leave the lid slightly open to allow air to circulate.

IF SOMETHING DOES NOT WORK

If Your Freezer Does Not Function Satisfactorily

Check the following before calling for a Service engineer:

Defect:	Check If:	Possible Cause:	Action:
Freezer not cold enough	Green light is on	Plug not connected correctly	Check plug and socket
		Defect in switch or fuse	Check fuse, call Service engineer
		Power failure	Wait until current returns
	Green and red light on	Fresh food recently placed in freezer	Wait a couple of hours
		Lid open too long	Wait a couple of hours
	Green light on, red light not on	Thermostat set too warm	Set thermostat to a higher number
		Lots of frost and ice formed	Defrost freezer
Freezer too cold	Yellow light on	"Super" button active	Press "Super" button
	Yellow light not on	Thermostat set too cold	Set thermostat to a lower number
Too much frost formed	Lid does not close properly	Lid in contact with goods in freezer	Re-arrange goods, check lid closes correctly
	Lots of moisture in room	Moisture from washing machine, tumble-dryer, etc.	Move freezer to a room with less moisture, or air room regularly
	Goods packed poorly	Lots of moisture from goods	Re-pack goods, see "How to Use"

If you are still unable to solve the problem, call your local Electrolux Service Force Centre.
Do not take any other steps. Incorrect procedure may cause personal injury or lead to additional defects.
It is quite normal for the freezer to seem warm on the outside occasionally, owing to the heat generated by the freezing process. This heat also helps to prevent the formation of moisture on the outside of the appliance which could cause rust.
If the freezer has been switched off briefly, the compressor may not start immediately when the current is re-connected. This is quite normal.

If There Is A Power Failure

Keep the lid closed if there is a power failure. As long as the power failure lasts no more than about 31 hours, the contents of your freezer will not be damaged.

How To Change The Bulb

Before changing the bulb, isolate the appliance from the electricity supply.
Slide your hand through and up into the bulb cavity as shown. Unscrew the bulb, and replace it with a new bulb (max. 15W). Then re-connect the electricity supply.
Extra bulbs are available from your local Electrolux Service Force Centre.

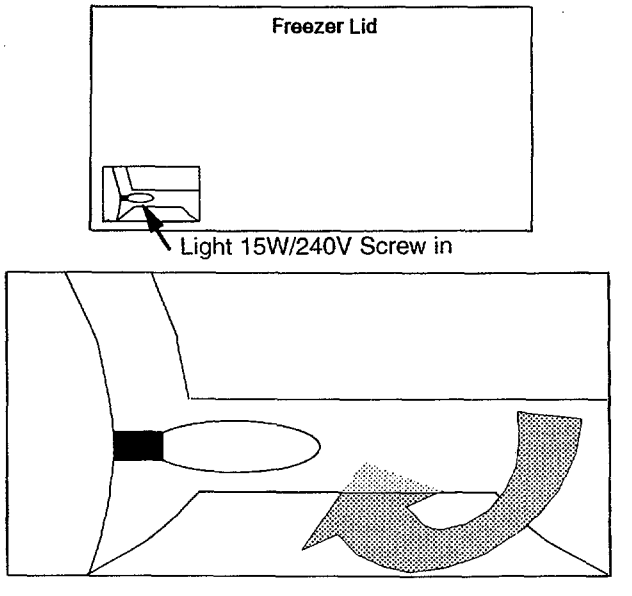

GUARANTEE CONDITIONS & SERVICE

Guarantee

All Electrolux home appliances are designed and built to the highest standards. Component parts are tested during manufacture and the finished appliances are tested again before packing.

Electrolux Refrigerators, Freezers and Fridge Freezers are covered by a comprehensive one year parts and labour guarantee. During the first year of ownership, any defective parts will be replaced free of charge by one of our 350 trained Service Technicians.

This guarantee is conditional upon Service being carried out by an Electrolux Service Technician or an authorised agent and the appliances having been correctly installed and used in accordance with the Company's instructions under normal domestic conditions in the UK or Republic of Ireland. It may be invalidated by unauthorised repair or modification.

The Company does not accept responsibility for defects arising from misuse, neglect or accident. Interior bulbs, glassware and the loss of food or other contents are also excluded.

This guarantee does not affect our legal rights.

Proof of the date of purchase will be required before service under guarantee is provided.

Service

The telephone number of your nearest Electrolux Service Center can be found on pages 12 and 13.

Service and Spare Parts

If you require Service or Spare Parts, contact your local Service Force Centre by telephoning

0990 929929

Customer Care Department

For general enquires concerning your Electrolux appliance, contact our Customer Relations Department as follows:

Customer Care Department
P.O. Box 47
Newbury
Berkshire
Tel. 01635 522799
Fax. 01635 42970

ELECTROLUX SERVICE FORCE

To contact your local Electrolux Service Centre telephone 0990 929929

MIDLANDS

BIRMINGHAM (M18)	66 Birch Road East, Wyrley Road Industrial Estate Witton Birmingham B67DB
BOURNE (M44)	Manning Road Ind Estate Pinfold Road Bourne PE10 9HT
GLOUCESTER (M23)	134 Eastgate Street Gloucester GL1 1QT
HEREFORD (M31)	Unit 3 Bank Buildings Cattle Market Hereford HE4 9HX
HIGHAM FERRERS (M51)	The Old Barn Westfield Terrace Higham Ferrers NN10 8BB
ILKESTON (M43)	Unit 2 Furnace Road Ilkeston DE7 5EP
LINCOLN (M40)	Unit 8 Stonefield Park Clifton Street Lincoln LN5 8AA
NEWCASTLE UNDER LYME (M12)	18-21 Croft Road Brampton Industrial Estate Newcastle under Lyme Staffordshire ST5 0TW
NUNEATON (M21)	19 Ptarmigan Place Townsend Drive Nuneaton CV11 6RX
NUNEATON (M22)	Unit 23-24 Alliance Business Pk Townsend Drive Nuneaton Warwickshire CV11 6RX
REDDITCH (M20)	Heming Road Washford Redditch Worcestershire B98 0DH
TAMWORTH (M19)	Unit 3 Sterling Park Claymore Tamworth B77 5DO

LONDON & EAST ANGLIA

CANVEY ISLAND	2-4 Sandhurst Kings Road Canvey Island SS8 0QY
ENFIELD (M49)	284 Alma Road Enfield London EN3 7BB
GRAVESEND (M57)	Unit B4, Imperial Business Estate Gravesend Kent DA11 0DL
HARPENDEN (M46)	Unit 4 Riverside Estate Coldharbour Lane Harpenden AL5 4UN
MAIDENHEAD (M60)	Reform Road Maidenhead Berkshire SL6 8BY
MOLESEY (M61)	10 Island Farm Avenue West Molesey Surrey KT8 2UZ
IPSWICH (M48)	Unit 2B Elton Park Business Centre Hadleigh Road Ipswich IP2 0DD
NORWICH (M52)	2b Trafalgar Street Norwich NR1 3HN
SUNBURY (M63)	Unit 1a The Summit Hanworth Road Hanworth Ind Estate Sunbury on Thames TW16 5D
SYDENHAM (M62)	Unit 6 Metro Centre Kangley Bridge Road Sydenham SE26

SOUTH EAST

ASHFORD (M58)	Unit 2 Bridge Road Business Estate Bridge Road Ashford Kent TN2 1BB
FLEET (M59)	Unit 1 Redfields Industrial Estate Church Crookham Fleet Hampshire GU13 0RD
HAYWARDS HEATH (M55)	21-25 Bridge Road Haywards Heath Sussex RH16 1UA
TONBRIDGE (M56)	Unit 30 Deacon Trading Estate Morley Road Tonbridge Kent TN9 1RA

SOUTH WEST

BARNSTAPLE (M30)	P.O. Box 12 Barnstaple North Devon EX31 2YB
BOURNEMOUTH (M26)	63-65 Curzon Road Bournemouth Dorset BH1 4PW
BRIDGEWATER (M35)	6 Hamp Industrial Estate Bridgewater Somerset
BRISTOL (M25)	11 Eldon Way Eldonwall Trading Bristol Avon BS4 3QQ
EMSWORTH (M33)	266 Main Road Southboure Emsworth PO10 8JL
GUERNSEY	Guernsey Electricity PO Box 4 Vale , Guernsey Channel Islands
ISLE OF WIGHT (M34)	Unit 8 Enterprise Court Ryde Business Park Ryde Isle of Wight PO33 1DB
JERSEY	Jersey Electricity Company PO Box 45 Queens Road St Helier Jersey Channel Islands JE4 8NY
NEWTON ABBOT (M29)	Unit 2 Zealley Industrial Estate Kingsteignton Newton Abbot S. Devon TQ12 3TD
PLYMOUTH (M32))	16 Faraday Mill Cattledown Plymouth PL4 0ST
REDRUTH (M36)	Unit 7D Pool Industrial Estate Wilson Way, Redruth, Cornwall TR15 3QW

ELECTROLUX SERVICE FORCE

To contact your local Electrolux Service Centre telephone 0990 929929

SCOTLAND

ABERDEEN (M05)	8 Cornhill Arcade Cornhill Drive Aberdeen AB2 5UT
AUCHTERMUCHY (M03)	33A Burnside Auchtermuchy Fife KY14 7AJ
ARGYLL (M67)	Briar Hill 7 Hill Street, Dunoon Argyll PA23 7AL
BLANTYRE (M07)	Unit 5 Block 2 Auchenraith Industrial Estate Rosendale Way Blantyre G72 0NJ
DUMFRIES (M01)	93 Irish Street Dumfries Scotland DG1 2PQ
DUNDEE (M70)	3-7 Blackness Street Dundee DD1 5LR
DUNOON (OWN SALES)	S Gibson 96 Argyll Street Dunoon PA23 7NE
GLASGOW (M04)	20 Cunningham Road Clyde Estate Rutherglen, Glasgow, G73 1PP
INVERNESS (M06)	Unit 3B Smithton Indust. Est. Smithton Inverness IV1 2PD
ISLE OF ARRAN (OWN SALES)	Arran Domestics Unit 4 The Douglas Centre Brodick Isle of Arran KA27 8AJ
ISLE OF ARRAN (OWN SALES)	Ronnie Hagerty Bruach Blackwaterfoot Isle of Arran
ISLE OF BARRA (OWN SALES)	J Zerfah 244 Bruernish Isle of Barra Western Islands HS9 5QY
ISLE OF BUTE (M66)	Walker Engineering Glenmhor Upper Serpentine Road Rothesay Isle of Bute PA20 9EH
ISLE OF LEWIS (M69)	ND Macleod 16 James Street Stornoway Isle of Lewis PA87 2QW
ISLE OF MULL (M68)	Brian Hogg Braeside Raeric Road Tobermory Isle of Mull PA75 6PU
KELSO (M08)	2-8 Wood Market Kelso Borders TD5 7AX
ORKNEY (M65)	Refrigeration Sales & Service Hatson Industrial Estate Kirkwall Orkney KW15 1RE
SHETLAND (OWN SALES)	George Robertson 3/4 Carlton Place Lerwick Shetland ZE1 0ED
SHETLAND (OWN SALES)	Tait Electronic Systems Ltd. Holmsgarth Road Lerwick Shetland ZE1 0PW
SHETLAND (OWN SALES)	Bolts Shetland Ltd 26 North Road Lerwick Shetland ZE1 0PE
WHALSAY (OWN SALES)	Leask Electrical Harlsdale Symbister, Whalsay Shetland ZE2 9AA

NORTHERN IRELAND

BELFAST (M27)	Owenmore House Kilwee Industrial Estate Upper Dunmury Lane Belfast BT17 0HD

WALES

CARDIFF (M28)	Guardian Industrial Estate Clydesmuir Road Tremorfa, Cardiff CF2 2QS
CLYWD (M14)	Unit 6-7 Coed - Parc Abergele Road Rhuddlan Clwyd Wales LL18 5UG
OSWESTRY (M17)	Plas Funnon Warehouse Middleton Road Oswestry SY11 2PP

NORTH EAST

GATESHEAD (M39)	Unit 356a Dukesway Court Dukesway Team Valley Gateshead NE11 0BH
GRIMSBY (M42)	Unit 2 Cromwell Road Grimsby South Humberside DN31 2BN
HULL (M41)	Unit 1 Boulevard Industrial Estate Hull HU3 4AY
LEEDS (M37)	64-66 Cross Gates Road Leeds LS15 7NN
NEWTON AYCLIFFE (M45)	Unit 16 Gurney Way Aycliffe Ind Estate Newton Aycliffe DL5 6UJ
SHEFFIELD (M38)	Pennine House Roman Ridge Ind. Roman Ridge Road Sheffield S9 1GB

NORTH WEST

BIRKENHEAD (M11)	1 Kelvin Park Dock Road Birkenhead L41 1LT
CARLISLE (M10)	Unit 8 South John Street Carlisle CA2 5AJ
ISLE OF MAN (M64)	South Quay Ind Estate Douglas Isle of Man
LIVERPOOL (M15)	1 Honeys Green Precinct Honeys Green Lane West Derby Liverpool L12 9JH
MANCHESTER (M09)	Unit 30, Oakhill Trading Estate Devonshire Road Worsley Manchester M28 3PT
PRESTON (M13)	Unit 250 Dawson Place Walton Summit Bamber Bridge Preston Lancashire PR5 8AL
STOCKPORT (M16)	Unit 20 Haigh Park Haigh Avenue Stockport SK4 1QR

ELECTROLUX GUARANTEE CONDITIONS

We, Electrolux, undertake that if within 12 months of the date of the purchase this Electrolux appliance or any part thereof is proved to be defective by reason only of faulty workmanship or materials, we will, at our option repair or replace the same FREE OF ANY CHARGE for labour, materials or carriage on the condition that:-

- The appliance has been correctly installed and used only on the electricity supply stated on the rating plate.
- The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's operating and maintenance instructions.
- The appliance has not been serviced, maintained, repaired, taken apart or tampered with, by any person not authorised by us.
- All service work under this guarantee must be undertaken by an Electrolux service representative or authorised agent.
- Any appliance or defective part replaced shall become our property.
- This guarantee is in addition to your statutory and other legal rights.
- Home visits are made between 8.30am and 5.30pm Mon - Fri. Visits may be available outside these hours in which case a charge will be made.

EXCLUSIONS - This guarantee does not cover:-

- Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulbs, removable parts of glass or plastic, or vacuum cleaner drive belts, brushes or dustbags.
- Costs incurred for calls to put right an appliance which is improperly installed or calls to appliances outside the United Kingdom.
- Appliances found to be in use within a commercial environment, plus those which are subject to rental agreements.
- **Products of Electrolux manufacture which are not marketed by Electrolux.**
- **The Electrolux Aftersales Service Company in the country concerned will be pleased to advise further.**
- **EU Countries. The Standard guarantee is applicable but subject to the owner's responsibility and cost to ensure the appliance meets the standards set by the Country to which the product is taken. Proof of purchase may be required.**

Electrolux

214.3611.55 7 8 9 10 11 12/97